RIGID

2021-2026
Yukon / Tahoe / Suburban

A-PILLAR KIT

INSTALLATION INSTRUCTIONS



IMPORTANT

THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.

Please read through all these instructions and tips before proceeding with the installation. We do our best to provide a simple installation process for all applications however, a professional installation is always recommended.

Box Includes:

- (2) Rigid Light Pods
- SDHQ A-Pillar Brackets
- Wiring Harness
- Hardware
- Power Switch

RIGID



PARTS INCLUDED

(1) Driver Side A-Pillar Mount
72-1206-G5-A
(1) Passenger Side A-Pillar Mount
72-1206-G5-B
(2) SDHQ Silicone Protective Pad
72-1206-G5-RI


HARDWARE

(2) Billet Spacer
70-1206-G4-E
(2) M8-1.25 x 60mm Flange Head Bolt
(2) M6-1.0 x 20mm S.S. Button Head Bolt
(2) 1/4" S.S. Washer
(2) SDHQ Silicone Protective Pads


TOOLS NEEDED

13mm Socket
1/4" Ratchet
13mm Wrench
T30 Torx Bit / Socket
4mm Hex Wrench
Dremel w/ cutoff disc

Driver Side (Assembled View)

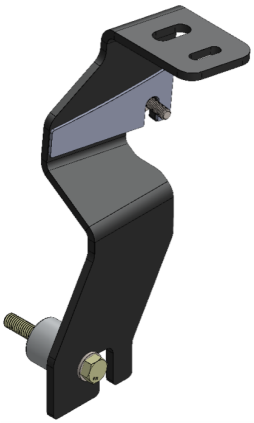

Driver Side (Exploded View)

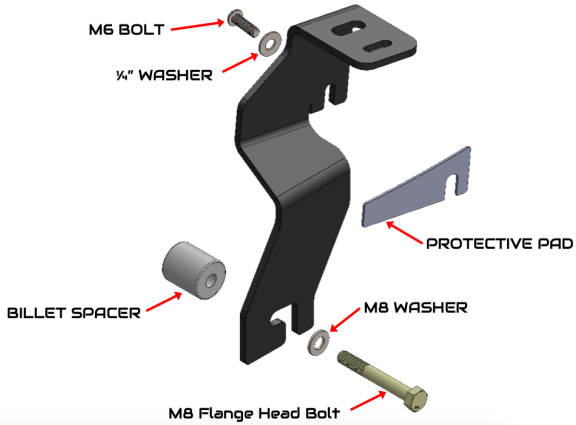

Approx. Install Time: 1-1/2 Hours (Not including wiring)
Some Trimming is Necessary.

***READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BE FORE BEGINNING INSTALLATION! **
For questions or help with the installation, please email help@sdhqoffroad.com

INSTALLATION INSTRUCTIONS

STEP: 1

Unbox your SDHQ A-Pillar Light Mounts and verify all parts are present. Familiarize yourself with the parts and diagrams.



STEP: 2

Locate (2) Silicone Protective Pads provided in the hardware kit. Remove the backing and install on the mounts as pictured (make sure surface is clean for best adhesion).



STEP: 3

Open the hood and apply masking tape to the surrounding surfaces in the work area to protect the vehicle.




STEP: 4

To remove the passenger-side cowl, start by removing the plastic trim clip as shown, then carefully pull off the cowl. Repeat the process for the driver side cowl—note that there is no plastic trim clip.

Caution: Be gentle when removing cowl panels to avoid damaging clips or paint.



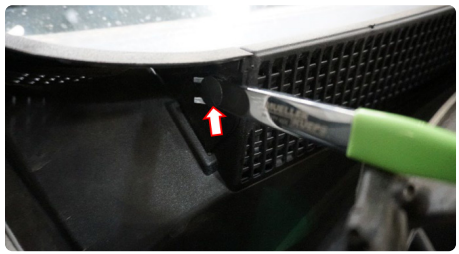

STEP: 5

Starting on the driver side, remove the hood hinge bolt circled in red below using a short 13mm socket and ¼" ratchet, or 13mm wrench. Remove the Torx head bolt circled in blue below by using a T30 Torx bit or socket.





STEP: 6


Install the spacer using the supplied M8 Flange Head Bolt. Thread the bolt in just enough to leave adequate space for the mount to fit between the spacer and the washer.



STEP: 7

Carefully lower the driver side A-Pillar mount between the hood hinge and fender. Once lowered, position the mount over the bolt between the spacer and washer as shown below.



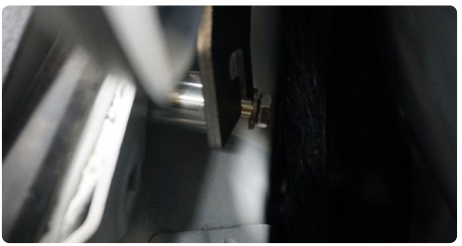

STEP: 8

Replace the OEM Screw with the supplied button head found in the hardware pack. Ensure the mount aligns flush with the fender surface and proceed to tighten.



Note: Be sure to tighten both bolts in an alternating fashion to ensure the mount seats evenly.

STEP: 9

If opted for SDHQ laser cut cowl end caps (SDHQ-72-1206-G5-CP), skip Step 10.

Cowl Cut End Caps: Mock up the driver-side cowl end cap on the fender, positioning it exactly as it would be during final installation. Mark a line approximately 1/8” outside the area where the cowl makes contact with any mounts or wiring. Then, remove the end cap and use a Dremel with a cutoff wheel to trim along the marked area as needed.





STEP: 10

Repeat Steps 5 through 9 for the passenger side.

STEP: 11

Install the trimmed cowl end caps. Finish wiring your lights and enjoy your new RIGID x SDHQ A-Pillar Light kit!



NOTES

NOTES

YOUR INSTALLATION IS NOW COMPLETE.

WELCOME TO

RIGID NATION



WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty
779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337
www.RigidIndustries.com

RIGID and RIGID Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a RIGID Industries.

RIGID

11-14954-A