RIGID

2021-2027
F-150 / Raptor

A-PILLAR KIT

INSTALLATION INSTRUCTIONS



IMPORTANT

THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.

Please read through all these instructions and tips before proceeding with the installation. We do our best to provide a simple installation process for all applications however, a professional installation is always recommended.

Box Includes:

- (2) Rigid Light Pods
- SDHQ A-Pillar Brackets
- Wiring Harness
- Hardware
- Power Switch

RIGID



PARTS INCLUDED

Driver A-Pillar Mount
SDHQ131206G14A
Passenger A-Pillar Mount
SDHQ111206G14C
Support Brackets
SDHQ111206G14B
Hardware Package
SDHQ111206G14D

HARDWARE

(2) ¼”- 20x¾” S.S. Button Head Bolts
(2) ¼”- 20x¾” S.S. Hex Head Bolts
(6) ¼”- 20 S.S. Nylock Nuts
(8) ¼”- S.S. Washers
(2) ¼” S.S. Fender Washers
(2) M6 1.00 x 20mm Button Head Bolts
(2) M8 1.25 x 30mm Flange Head Bolts

TOOLS NEEDED

10mm Socket (1/4” Drive)
1/4” Drive Ratchet
13 mm Socket or/ 13mm Wrench
1/4” Drive 2” Extension
7/16” Wrench
Anti-Seize Lubricant
Masking Tape

Tech Notes

Fits 2021 - 2026 F-150 and Raptor
No cutting or drilling required.


Use AntiSeize on all Stainless Steel Hardware, unless otherwise specified.

Upper brackets mount to the INSIDE of the APillar Mounts.

** Approximate Install 1.25 hours (not including wiring)**
CAUTION: Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems. Take care to avoid any heat sources and sharp or abrasive surfaces.

***READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BE FORE BEGINNING INSTALLATION! **

For questions or help with the installation, please email help@sdhqoffroad.com

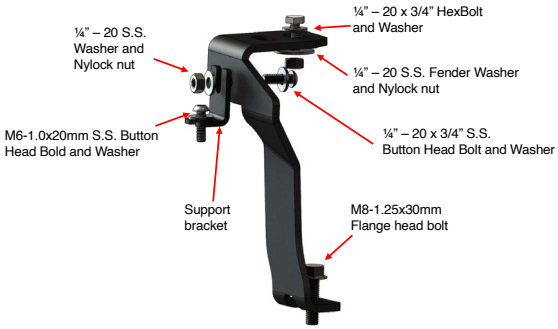

INSTALLATION INSTRUCTIONS

STEP: 1

Unbox your SDHQ 2021+ F-150 A-Pillar Light Mount System and lay the parts out on a clean table. Verify all parts are present and familiarize yourself with the parts.

STEP: 2

Open your hood. Using masking tape, tape off the top outer edges of the hood by the cowl and top back edges of the fenders by where you will be working. Unscrew and set aside your antenna from the passenger side of the vehicle.

STEP: 3

Starting on the Driver's side, pull back the rubber part of the cowl and remove the 10mm bolt from the top of the fender.




STEP: 4

Remove the 13mm head bolts that holds down the back of the hood hinges to the truck.



STEP: 5


Locate your Driver Side Light Mount, carefully slip the mount down between the fender and the hood hinge. Align the lower slot with the rear hood hinge bolt hole, insert and thread in the supplied M8 bolt, leave loose for now.

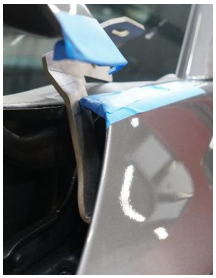



STEP: 6

Next locate the Driver Side Support Bracket, carefully slip the bracket behind the light mount so that the open slot slides over the removed fender bolt hole and install the supplied M6 Button Head bolt and washer. Insert the ¼" hardware and loosely bolt the A-pillar to the Support Bracket. Apply Anti-Seize Lubricant to the stainless steel button head hardware and install through the light mount and support bracket slots with washers and nylock nut.

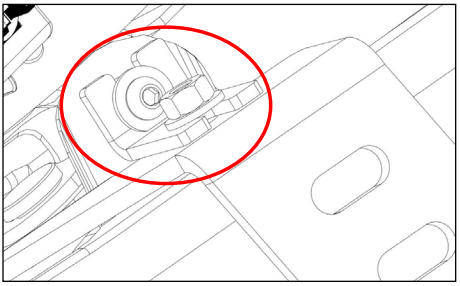

STEP: 7

Starting with the lower M8 hood hinge bolt, tighten while holding mount in place. Tighten the rest of the hardware. If needed the mounts final alignment can be adjusted via loosening the mounting bolts and repositioning the mount in the mounting slots. Repeat steps 3 through 7 for the passenger side.

STEP: 8

Remove tape and screw in your antenna. Install lights via the inner mounting slots on the top of the mount, position as desired.

Wire Your Lights and go outside.

YOUR INSTALLATION IS NOW COMPLETE.

WELCOME TO

RIGID NATION



WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty
779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337
www.RigidIndustries.com

RIGID and RIGID Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a RIGID Industries.

RIGID

11-14955-A