RIGID®

2023-2027
FORD SuperDuty

A-PILLAR KIT

INSTALLATION INSTRUCTIONS



IMPORTANT

THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.

Please read through all these instructions and tips before proceeding with the installation. We do our best to provide a simple installation process for all applications however, a professional installation is always recommended.

Box Includes:

- (2) Rigid Light Pods
- SDHQ A-Pillar Brackets
- Wiring Harness
- Hardware
- Power Switch

RIGID



CAUTION: Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems. Take care to avoid any heat sources and sharp or abrasive surfaces.

PARTS INCLUDED

Driver APillar Mount
SDHQ111206G5A
Passenger APillar Mount
SDHQ111206G5B
Driver Upper Bracket
SDHQ111206G5C
Passenger Upper Bracket
SDHQ111206G5D
Hardware Package
SDHQ111206G5HP

HARDWARE

(4) ¼" – 20 x ¾" S.S. Button Head Bolts (2) ¼" – 20 x ¾" S.S. Hex Head Bolts (6) ¼" – 20 S.S. Nylock Nuts (12) ¼" S.S. SAE Flat Washers

TOOLS NEEDED

10mm and 11mm or 7/16" Socket Wobble 13mm Socket Ratchet 3" Extension 5/32" Allen Wrench 7/16" or 11mm Wrench Panel Removal Tool or Flat Head Screw Drivers Masking tape AntiSeize Lubricant


Tech Notes

No cutting or drilling required.
Use AntiSeize on all Stainless Steel Hardware, unless otherwise specified.
Upper brackets mount to the OUTSIDE of the APillar Mounts.
**** Approximate Install 2 hours (not including wiring)** Time:**

***READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BE FORE BEGINNING INSTALLATION! **

For questions or help with the installation, please email help@sdhqoffroad.com

INSTALLATION INSTRUCTIONS

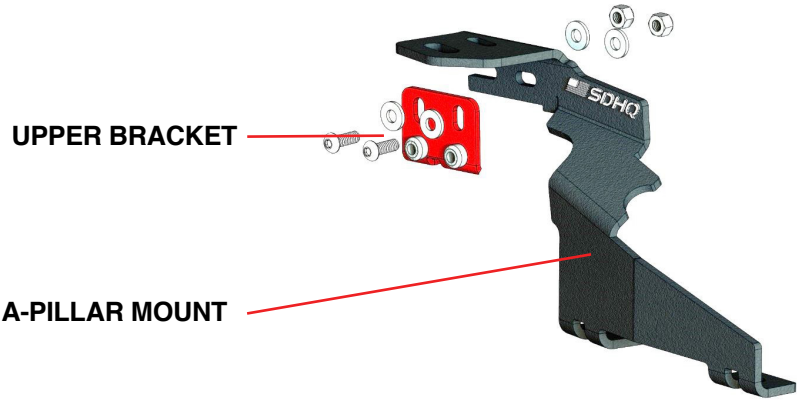

STEP: 1

Unbox your SDHQ Super Duty A-Pillar Light Mounts and lay the parts out on a clean table. Verify all parts are present and familiarize yourself with the parts.

STEP: 2

Flip up your windshield wipers as if you are going to be cleaning your windshield. Locate the small tab on the underside of the wiper arm where it attaches to the shaft. Pull outwards on this tab and lift the wiper arms off the shafts and set aside.

**Note: There is a small silver keyway that may fallout. Be sure to locate this during removal and reuse during install.





Use masking tape to tape off the outer edges of the hood and the top back edges of the fenders where the light mounts will be installed to protect the paint during installation.

STEP: 3

The front cowl will need to be removed for the install. First remove the antenna from the passenger side. The cowl is held in by only (12) plastic clips. Starting on the driver side, gently pry up on the front visible clips that hold on the top plastic half of the cowl, repeat for the passenger side of the cowl. The rear clips are hidden under the cowl. Pulling up closest to the remaining engaged clips works best for removal. Slowly work it off being careful not to break any clips. Disconnect the driver side windshield washer lines and set the cowl aside.



STEP: 4

Starting on the driver side, remove the (1) 10mm head fender bolt that was covered by the cowl at the top of the fender. Remove the rear and center (2) 13mm bolts that hold down the back of the hood hinge to the truck. Set all of these bolts aside as they will be reused.





STEP: 5

Install the Driver Side Upper Bracket at the top of the fender so the bumpers are pushed against the fender. Insert and begin threading the 10mm headed fender bolt. Leave the bolt slightly loose for now.



STEP: 6

Locate the Driver Side A-Pillar Mount. Carefully slide the mount in position between the fender and the hood hinge. The Upper Bracket will be on the **OUTSIDE** of the A-Pillar Mount. Once the mount is in position and aligned with the rear and center 13mm hood hinge mounts, insert and begin threading in the (2) 13mm bolts. Check fender alignment and completely tighten down the bolts.



STEP: 7

Insert (1) ¼" – 20 x ¾" S.S. Button Head bolt with (1) ¼" washer through the Driver Side Upper Bracket and the Driver Side Light Mount. Place another ¼" washer and hand tighten a ¼" – 20 locknut. Repeat this step for the second hole in the mounts and completely tighten the bolts.





STEP: 8

Repeat steps 4-7 for the Passenger Side Light Mount. Completely tighten the 10mm bolts on the top of the fenders, securing the Upper Bracket to the vehicle. Carefully lower the hood and check each side for clearance between the hood and the A-pillars if it will contact, either adjust the hood alignment or the A-pillar alignment and complete this check again.

STEP: 9

Install lights via the large mounting slot position. Use the provided ¼" hardware for securing larger lights such as the RIGID 6" 360 or D-XL.

Reinstall the cowl, windshield wipers, and antenna referring to steps 24. When installing the cowl carefully tuck the outer rubber lip under the A-pillar mount starting on the passenger side. Then snap the clips in working over to the driver side and tuck the rubber under the the A-Pillar. Enjoy your new SDHQ Built Super Duty A-Pillar Mounts!


RIGID


RIGID


SDHQ

NOTES

YOUR INSTALLATION IS NOW COMPLETE.

WELCOME TO RIGID NATION



WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty
779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337
www.RigidIndustries.com

RIGID and RIGID Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a RIGID Industries.

RIGID

11-14956-A