RIGID

2019-2026
Silverado 1500

A-PILLAR KIT

INSTALLATION INSTRUCTIONS



IMPORTANT

THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.

Please read through all these instructions and tips before proceeding with the installation. We do our best to provide a simple installation process for all applications however, a professional installation is always recommended.

Box Includes:

- (2) Rigid Light Pods
- SDHQ A-Pillar Brackets
- Wiring Harness
- Hardware
- Power Switch

RIGID



CAUTION: Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems. Take care to avoid any heat sources and sharp or abrasive surfaces.

PARTS INCLUDED

Driver A-Pillar Mount
SDHQ-70-1206-G4-A
Passenger A-Pillar Mount
SDHQ-70-1206-G4-B
Driver Support Bracket
SDHQ-70-1206-G4-C
Passenger Support Bracket
SDHQ-70-1206-G4-D
Aluminum Spacer
SDHQ-70-1206-G4-E
Hardware Package
SDHQ-70-1206-G4-F

HARDWARE

(2) M8 – 1.25 x 60mm Hex Head Bolt
(2) M8 Washers
(2) M6 – 1.0 x 20mm S.S. Button Head Bolt
(2) ¼" - 20 x ¾" S.S. Button Head Bolt
(2) ¼" - 20 x ¾" S.S. Hex Head Bolt
(8) ¼" S.S. Washer
(2) ¼" – 20 S.S. Nylock Nut
(2) ¼" – 20 Clip on Barrel Nut
(2) SDHQ Silicone Protective Pad
(2) #9 O-Ring

TOOLS NEEDED

10mm, 13mm Short Drive Socket
13mm offset Ratcheting Wrench
Extension
¼" Ratchet
Torx T30 Bit
Hood Prop
Blue Painters Tape
5/32" / 4mm Hex Drive
Sharpie
Flush Cut Pliers
Razor Blade
Masking Tape

Tech Notes


Use AntiSeize on all Stainless Steel Hardware, unless otherwise specified.

**** Approximate Install 1.5 hours (not including wiring)** Time:**

Trimming of cowl end caps is required.
Does NOT fit 2019+ GMC 1500. See SDHQ-77-1206-S4.

INSTALLATION INSTRUCTIONS

Chevy Silverado 1500

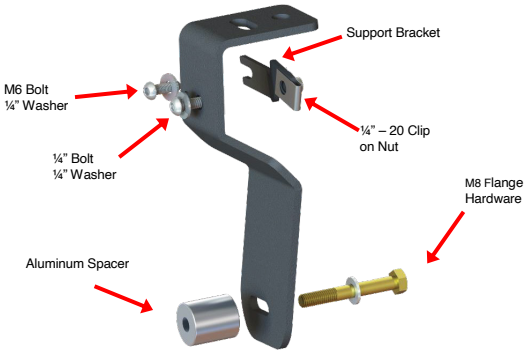


STEP: 1

Unbox your A-Pillar Light Mounts and lay the parts out on a clean table. Verify all parts are present and familiarize yourself with the parts.

STEP: 2

Locate (2) Silicone Protective Pads provided in the hardware kit. Install on mounts as pictured below (make sure surface is clean for best adhesion). Remove the clear hard plastic cover. Install the ¼" – 20 x 17/32" Clip on Barrel Nuts onto support brackets as shown below.




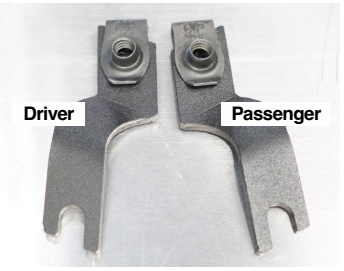

STEP: 3

Apply masking tape to hood and fender where you will be working. Remove antenna. Open the hood and remove the foam cowl end caps. Support the hood with a hood prop. Remove the (2) 10mm head bolts securing the antenna mount.



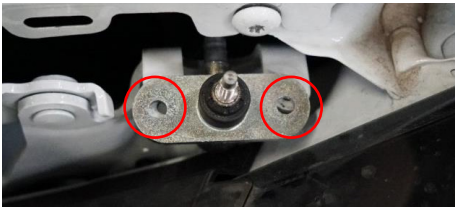

STEP: 4

Starting on the driver side, remove the bolt circled in red below using a short 13mm socket and ¼" drive ratchet, or 13mm wrench. Remove the Torx T30 head bolt circled in blue below.





STEP: 5

Carefully lower the driver side mount between the hood hinge and fender. Once lowered, insert (1) M8 bolt and (1) 5/16" washer through the lower mounting slot. Place (1) aluminum spacer followed by (1) #9 O-ring over the bolt between the mount and the hood hinge. Begin threading the M8 bolt.



STEP: 6

Position the driver side support bracket as shown. Thread (1) M6 bolt and (1) ¼" washer into the threaded hole to secure the support bracket. Align the driver mount and support bracket. Thread (1) ¼" bolt and washer through the mount and into the support bracket. Adjust the mount such that the top is flat with the ground and tighten all hardware.





On 2020+ models the hood hinge bolt can be difficult to access due to some changes to the fender design. An alternative install process is to pull back the fender liner, removing the rear fender liner bolts shown, and installing the spacer and bolt from the bottom side of the fender.

STEP: 7

Repeat Steps 4-6 for the passenger side. Once the mount is tight, tighten the (2) 10mm head bolts securing the antenna mount to the truck.

STEP: 8


With both A-Pillar mounts installed, install and wire your lights.

TRIMMING INSTRUCTIONS

STEP: 9

Position the driver side cowl end cap on the fender as if you were going to install it. Mark 1/8” outside of where the cowl will contact the mount or wire. Remove the cowl end cap. Remove ¼” of material between the marks. Repeat for the passenger side.



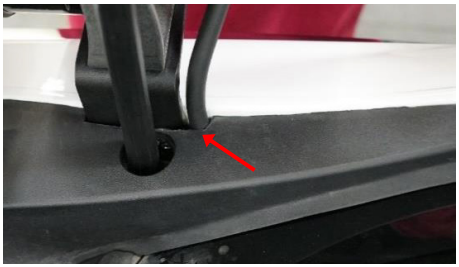

STEP: 10

Install the trimmed cowl end caps and antenna. Finish wiring your lights and enjoy your new SDHQ A-Pillar Light Mounts!


RIGID


RIGID


SDHQ

NOTES

YOUR INSTALLATION IS NOW COMPLETE.

WELCOME TO

RIGID NATION



WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty
779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337
www.RigidIndustries.com

RIGID and RIGID Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a RIGID Industries.

RIGID

11-14950-A