

Rear Interior Window Molle Panel

2021+ FORD BRONCO

MPBR-01



TOOLS REQUIRED

- Ratchet
- 4mm Allen Bit
- 13mm Socket
- T50 Torx Bit

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hours
- Time to install this should only take about an hour and a half.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

HARDWARE INCLUDED

- (2) M8x30 Hex
- (2) M8 Flat Washers
- (14) M6x20
- (14) M6 Flat Washers

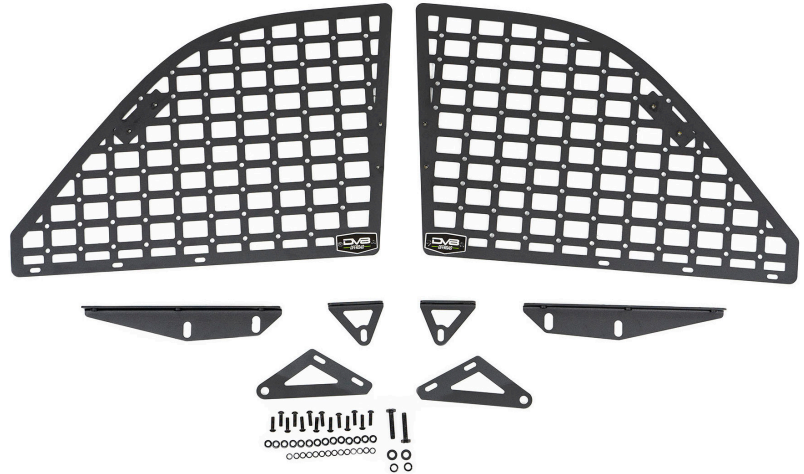

STEP 1 | Install the small “L” shaped bracket onto molle panel on the same the side that the logo is located.

Use a 4mm allen bit and provided M6 hardware. Leave loose to allow for adjustment.

Pictured is installation of the passenger side molle panel.



INSTALLATION MANUAL

STEP 2 | Install the other smaller bracket in the orientation shown on the same side that the logo is located.

Use a 4mm allen bit and the provided M6 hardware. Leave loose to allow for adjustment.



STEP 3 | Install the larger bracket on the side of the molle panel without the logo, in the orientation shown.

Use a 4mm allen bit and provided M6 hardware. Leave loose to allow for adjustment.



INSTALLATION MANUAL

STEP 4 | Moving to the interior of the vehicle, remove the plastic trim from the seat belt to access the bolt.

Use a T50 torx bit to remove the seat belt pulley.




STEP 5 | Use a T50 to remove the two factory bolts securing the hardtop.




INSTALLATION MANUAL

STEP 6 | Maneuver the molle panel into the approximate location install and loosely secure with a T50 and the factory hardtop bolts.

This will allow for adjustment until installation is finished.

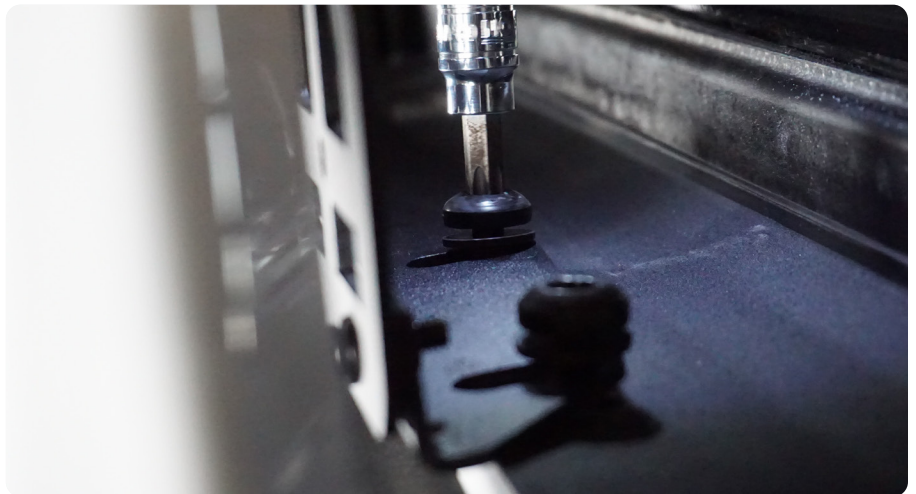

STEP 7 | Secure the mount at the seat belt by placing the spacer behind the mount and installing the seatbelt over it using a T50 and the factory bolt. Torque to with a dab of blue Loctite.

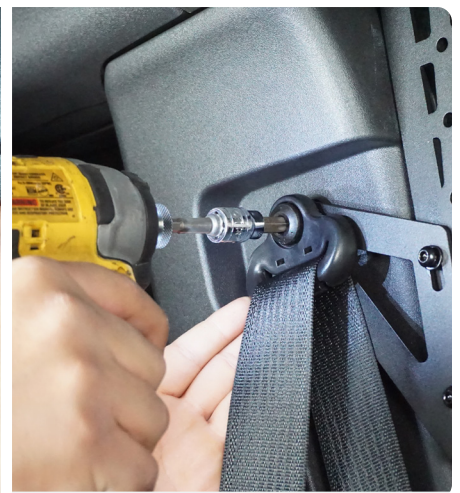

INSTALLATION MANUAL

STEP 8 | Secure the small “L” bracket at the rear of the roll bar using the provided M8 hardware and a 13mm socket.



STEP 9 | Finish securing all M6 hardware using a 4mm allen bit.

Secure the factory hardtop bolts using a T50.

Repeat steps 1-9 for the other side of the vehicle.



INSTALLATION MANUAL

STEP 10 | To remove the top and run the molle panel is very simple.

Remove the hardtop bolts using a T50.

Remove the bottom three M6x20 using a 4mm allen head.

Remove the bracket and proceed with removal of hardtop.

When the hardtop is removed, reinstall the bracket with the factory hardtop bolts and M6 hardware.



INSTALLATION MANUAL

STEP 11 | Congratulations, you are finished with the install of the 21+ Ford Bronco Rear Window Interior Molle Panels.

