

ADVENTURE FURTHER®

BLOX SOLAR PANEL MOUNT
PL1
92501 | 59-00283IM

INSTALLATION INSTRUCTIONS


IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.

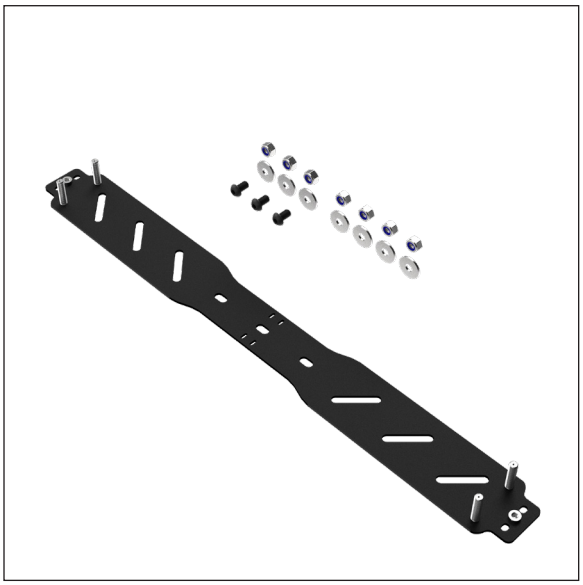

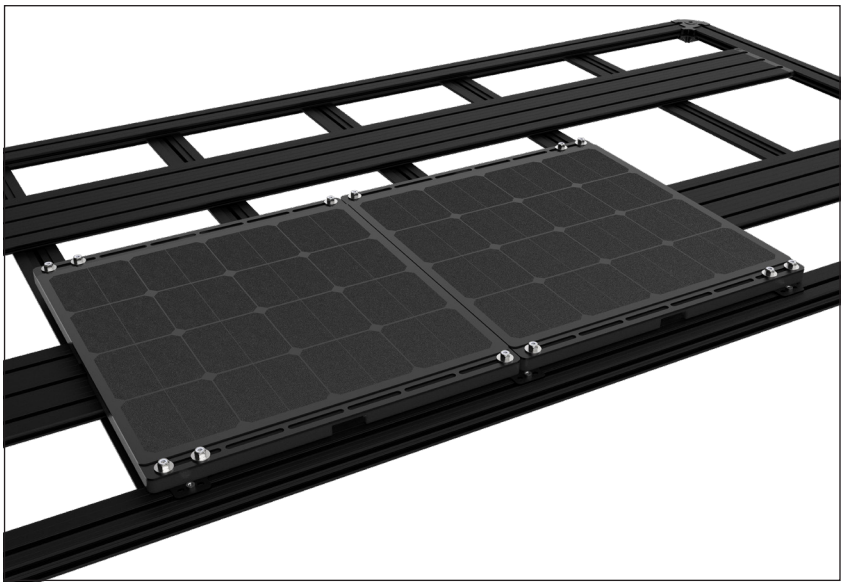


TOOLS NEEDED: 13MM WRENCH AND SOCKET SET, METRIC ALLEN KEY SET

1

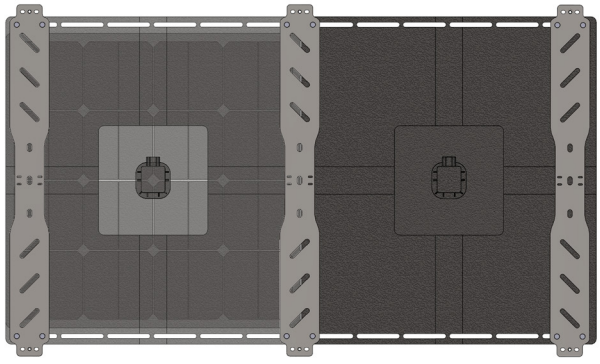

THIS PRODUCT IS INTENDED TO MOUNT A SUNFLARE BLOX 50W PANEL SEAMLESSLY WITH THE PL1 RACK. THERE ARE ADDITIONAL SLOTS ON THE BRACKET THAT COULD FIT OTHER APPLICATIONS. PLEASE REFER TO THE DIMENSIONS TO SEE IF IT WILL WORK FOR YOUR APPLICATION.


2

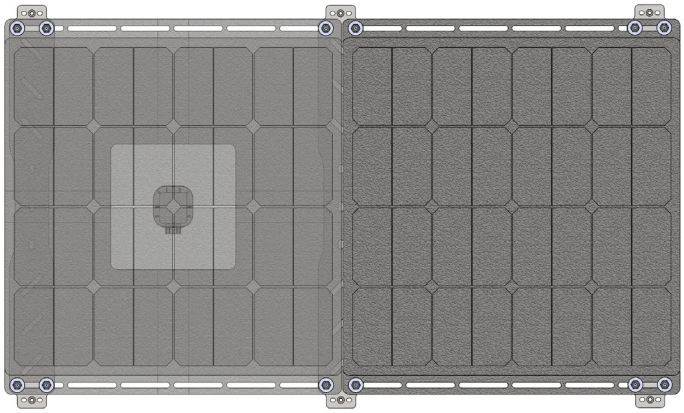


YOU WILL NEED TWO BRACKETS TO SECURELY ATTACH THE BLOX TO THE ROOFRACK. THE STUD SPACING IS DESIGNED SO THAT YOU CAN “LINK” PANELS IN TANDEM WITH EACH OTHER. THE NUMBER OF BRACKETS REQUIRED WILL BE DEPENDENT ON THE AMOUNT OF PANELS.

©Copyright 2025 KC HiLiTES, Inc.


INSTALLATION INSTRUCTIONS

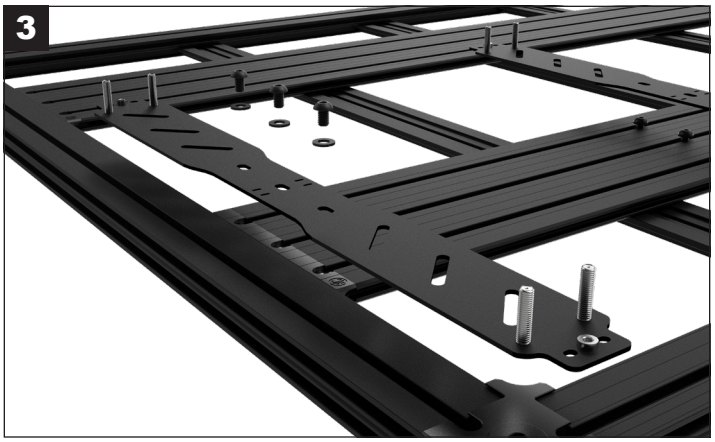


BEGIN BY SLIDING M8 NUTS INTO THE UPPER DECK. THERE WILL BE 3 INCLUDED NUTS FOR EACH RESPECTIVE RAIL. POSITION THE BRACKETS LOOSELY SO THEY ARE ABLE TO SLIDE. GRAB YOUR SOLAR PANEL ARRAY AND PLACE THEM LOOSELY IN PLACE TO GET BRACKET POSITIONING THEN TIGHTEN HARDWARE.

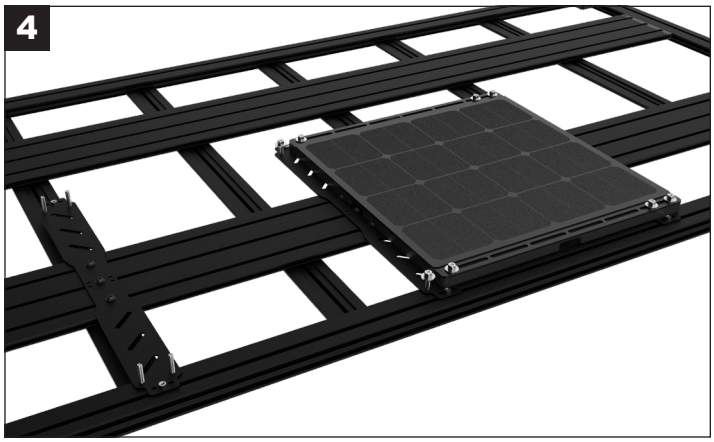

WITH THE BRACKETS TIGHTENED, CONNECT ALL YOUR NECESSARY WIRING. TAKE YOUR SOLAR PANEL ARRAY AND PLACE THEM OVER THE STUDS. PLACE THE M8 WASHERS OVER THE STUDS AND TIGHTEN WITH THE INCLUDED NYLOCS.

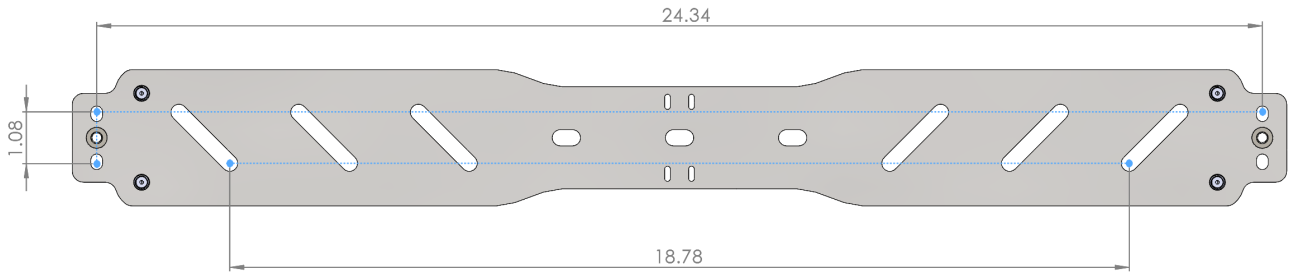

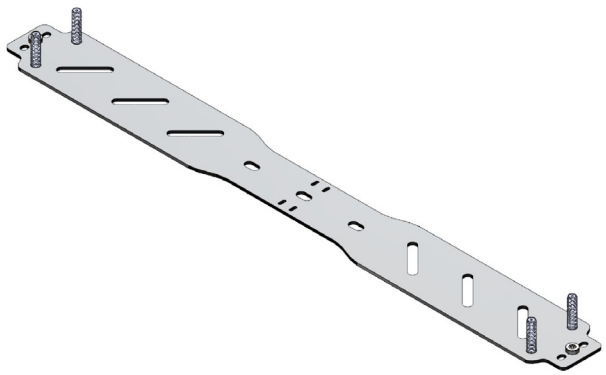

©Copyright 2025 KC HiLiTES, Inc.