
ADVENTURE FURTHER®

UNIVERSAL AWNING MOUNT
PL1
92502 | 59-00287IM

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.

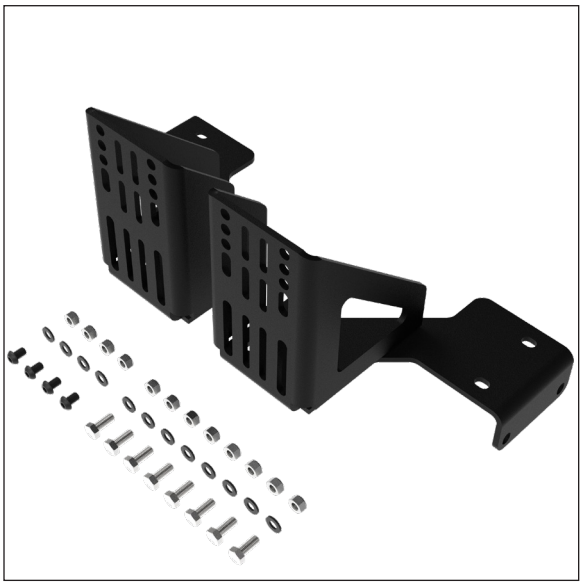




TOOLS NEEDED: 13MM WRENCH AND SOCKET SET, METRIC ALLEN KEY SET

1



BEFORE PROCEEDING, ENSURE THAT YOUR AWNING WILL FIT WITH THIS APPLICATION. THIS MOUNT IS INTENDED TO BE UNIVERSAL BUT DIFFERENT MANUFACTURERS HAVE DIFFERENT REQUIREMENTS. PLEASE ENSURE YOUR AWNING MEASUREMENTS WILL WORK WITH THIS SETUP.

2

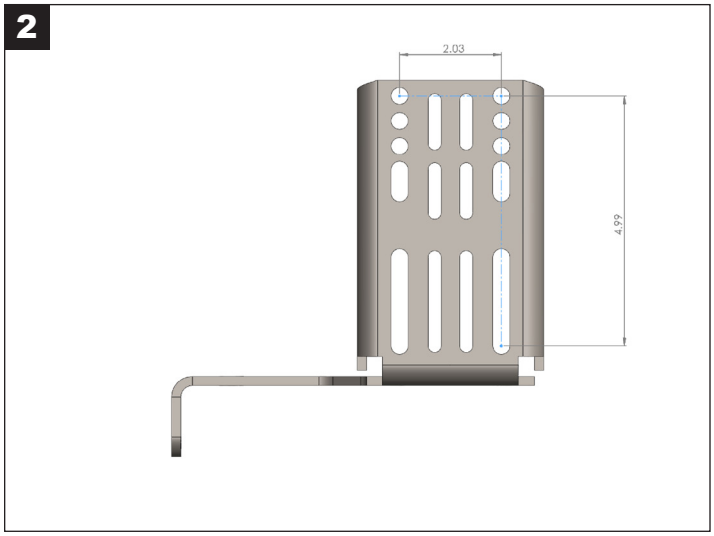


THESE AWNING MOUNTS HAVE VERTICAL ADJUSTMENTS AND CAN ACCOMMODATE M8 OR M6 HARDWARE, DEPENDENT ON YOUR SPECIFIC SETUP. PLEASE REFER TO THESE DIMENSIONS TO ENSURE COMPATIBILITY WITH YOUR SETUP.

©Copyright 2025 KC HiLiTES, Inc.


INSTALLATION INSTRUCTIONS

3

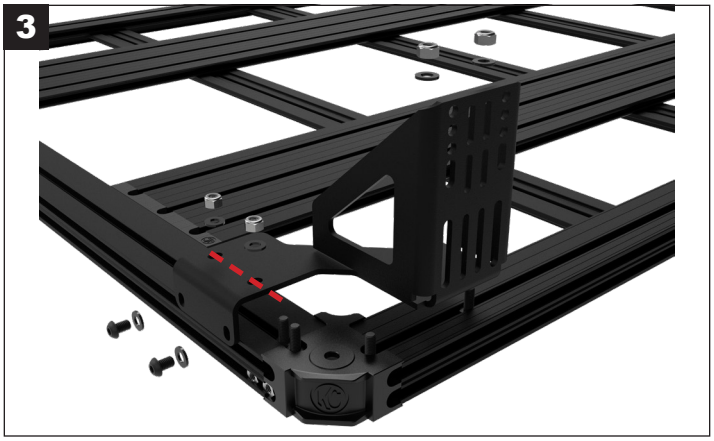

THE MOUNTS ARE SIDE SPECIFIC. START WITH SLIDING YOUR M8 HEX HEAD BOLTS INTO THE UPPER EXTRUSION RAIL. THERE WILL BE TWO M8 HEX HEADS PER UPPER EXTRUSION RAIL.

4

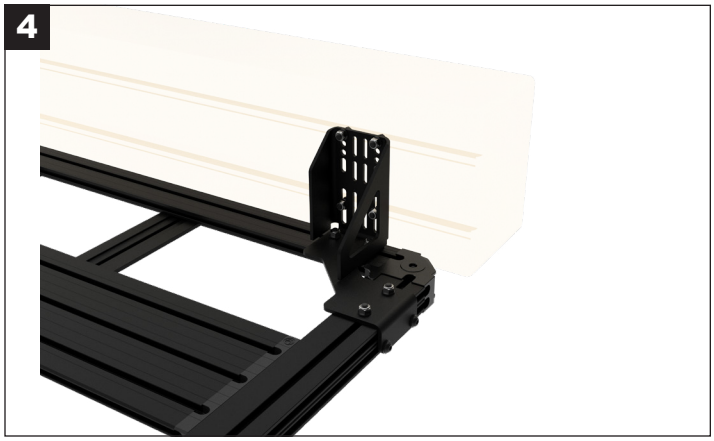

WITH YOUR UPPER HEX HEAD BOLTS INSTALLED, YOU CAN GO AHEAD AND LOCATE THESE BOLTS AND PLACE YOUR AWNING MOUNT DOWN.

5




WITH THE AWNING MOUNT IN PLACE, SLIDE IN TWO M8 NUTS INTO THE LOWER CHANNEL. LOCATE THE NUTS IN THE EXTRUSION CHANNEL AND FASTEN WITH THE M8 WASHERS AND BUTTON HEADS.

6



REPEAT THESE STEPS FOR THE OPPOSITE SIDE. ENSURE ALL HARDWARE IS TIGHTENED PROPERLY. WE DO NOT RECOMMEND USING POWER TOOLS AS THAT CAN INCREASE RISK OF DAMAGING HARDWARE.

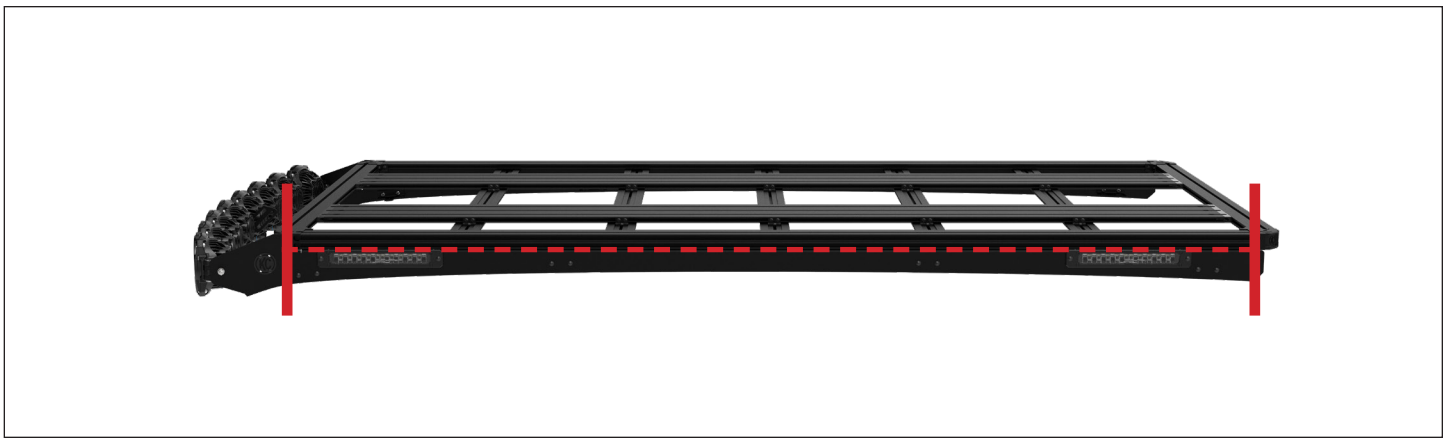

REFER TO THIS MEASURING GUIDE TO ENSURE IT MEETS REQUIREMENTS. YOU WILL NEED TO MEASURE THE RED LINES IN THIS IMAGE WITH YOUR APPLICATION AND MAKE SURE THAT YOUR AWNING MOUNTING SURFACE MEASUREMENT IS GREATER THAN THAT NUMBER.

©Copyright 2025 KC HiLiTES, Inc.