

Product Number: N3250, N3270 Application: 2015 Ford F150

SAFETY

Your safety and the safety of others is very important.

- In order to help you make informed decisions about safety, we have provided installation instructions and other information.
- These instructions alert you to potential hazards that could hurt you or others.
- Please do a job safety analysis (JSA) before each task to identify potential hazards for your situation and remove/protect against them.
- You must use your own good judgment, and take your time.

Read and understand all safety precautions and instructions before installing this product.

THIS PRODUCT IS FOR OFFROAD USE ONLY. ALL LIABILITY FOR INSTALLATION AND USE RESTS WITH THE OWNER.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE.

Injury hazard

Failure to observe these instructions could lead to severe injury or death.

	Always remove jewelry and wear eye protection. Always use extreme caution when jacking up a vehicle for work. Set emergency
	brake and use tire blocks. Locate and use the vehicle manufacturers designated
	lifting points. Use jack stands.
	Always use appropriate and adequate care in lifting components into place.
	Always insure components will remain secure during installation and operation.
	Always wear safety glasses when installing this kit. A drilling operation will
	cause flying metal chips. Flying chips can cause serious eye injury.
	Always use extreme caution when drilling on a vehicle. Thoroughly inspect the
	area to be drilled (on both sides of material) prior to drilling, and relocate any
	objects that may be damaged.
	•
	Always tighten all nuts and bolts securely per installation instructions.
ā	Always route electrical cables carefully. Avoid moving parts, components that
_	become hot and rough or sharp edges.
_	
	Always insulate and protect all exposed wiring and electrical terminals.
	Always perform regular inspections and maintenance on mounts and
	related hardware.



Product Number: N3250, N3270


Application: 2015 Ford F150

I. Overview

Congratulations on your new purchase of the industries' best and most stylish winch mount available for the 2015 Ford F150! This winch mount has been engineered for strength.

Your winch mount is designed in 3-D from digitized data, CNC laser cut, fabricated, and powder coated...all in the U.S.A.

Enjoy the fit and finish of a quality Ford F150 Winch Mount from Fab Fours Inc.

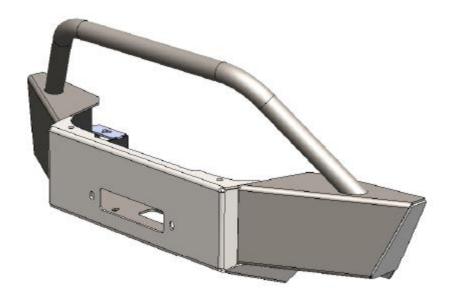



Installation Instructions

Winch Mount

Product Number: N3250, N3270 Application: 2015 Ford F150


II. Tools Required

- ½" Drive Socket Wrench with 3" Extension
- Socket set
- ½" Drive Torque Wrench
- Wrench set

III. Kit Contents

QTY	DESCRIPTION	FAB FOURS PART NUMBER
x 1	Winch Mount	N3250
x 2	Tow Hook	61366
x 1	N3250 Hardware Kit	50031-HW
x 1	N3250 Ford F-150 Instruction Manual	N3250-IM
x 1	Passenger side mounting bracket	20910
x 1	Driver side mounting bracket	20911

IV. Included Hardware

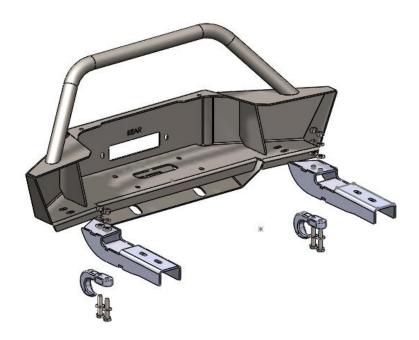



Product Number: N3250, N3270 Application: 2015 Ford F150

V. Removal of OEM tow hooks and Plastic

Note: Save all OEM parts until installation is complete!

A. Using a flathead screwdriver, carefully remove center plastic piece, indicated by oval in the center of the OE bumper.



Figure 1a



Figure 1b

B. Using 21 mm socket, remove the three nuts per side, two are located under the plastic center piece (ref. fig. 2a-b) and the third accessible from the back



VV IIICII IVIUUIII

Product Number: N3250, N3270 Application: 2015 Ford F150

of the frame (ref. fig. 2c). If front OEM bumper contains sonar (ref. fig. 2b), remove four bolts with 11 mm. If your bumper includes a sonar device, remove it now using a 12 point, 4mm socket. Unplug the device.





Figure 2a



Figure 2c

- C. To remove the electrical harness, unplug fog light and remove one (1) Christmas tree plug on each side. At this time, carefully pull away bumper checking to make sure nothing is still connected.
- D. Pull rubber covers off the tow hooks. Use a 15 mm socket to remove the two bolts per side holding the tow hook in place.



Product Number: N3250, N3270 Application: 2015 Ford F150



Figure 3

- E. Slide out both nut strips from the frame channel when done.
- F. Reinstall bumper without the tow hooks and plastic tow hook shrouds.

VI. Installation of Fab Fours Winch Mount

- A. Review the provided exploded parts view.
- B. Loosely install the provided bumper mounting brackets to the OEM tow hook locations using factory fasteners.
- C. Install the small frame winch (customer supplied).
- D. With the aid of a lifting device or additional helpers, lift the winch mount and position it so that the mounts align to the mounts installed in Step 2. Install the supplied ½" Bolts through the tow hooks and winch mount into the brackets.
- E. Torque all bolts.



Installation Instructions

Winch Mount

Product Number: N3250, N3270 Application: 2015 Ford F150

VII. Maintenance/Care

	Periodically check and tighten all fasteners
_	Stripped, fractured, or bent bolts or nuts need to be replaced
	After washing of the vehicle make sure to fully dry all surfaces